# **SERVICE & OPERATING MANUAL**

**Original Instructions** 

# **Certified Quality**

CE

🏐 SAI GLOBAL

ISO 9001 Certified ISO 14001 Certified



# EAC

1935/2004/EC






Warren Rupp, Inc. A Unit of IDEX Corporation 800 N. Main St., Mansfield, Ohio 44902 USA Telephone 419.524.8388 Fax 419.522.7867 SANDPIPERPUMP.COM



© Copyright 2017 Warren Rupp, Inc. All rights reserved

# Model F15

Metallic Food Processing Pump Constructed with FDA Compliant Materials Design Level 1

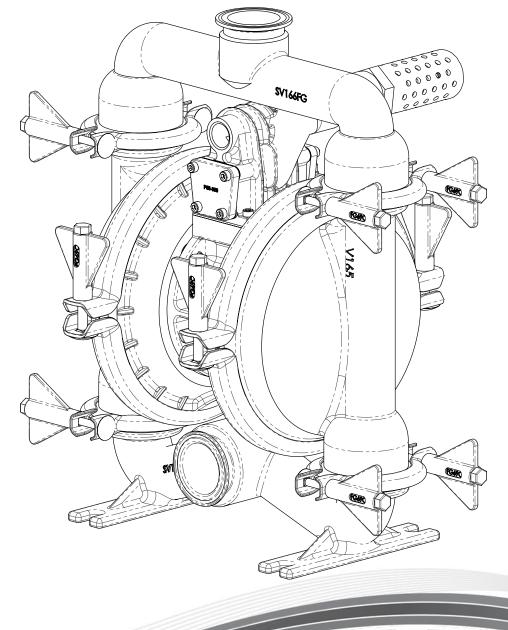



SANDPIPERPUMP.COM

# **Safety Information**

IMPORTANT



Read the safety warnings and instructions in this manual before pump installation and start-up. Failure to comply with the recommendations stated in this manual could damage the pump and void factory warranty.



When the pump is used for materials that tend to settle out or solidify, the pump should be flushed after each use to prevent damage. In freezing temperatures the pump should be completely drained between uses.

# A CAUTION



Before pump operation, inspect all fasteners for loosening caused by gasket creep. Retighten loose fasteners to prevent leakage. Follow recommended torques stated in this manual.



Nonmetallic pumps and plastic components are not UV stabilized. Ultraviolet radiation can damage these parts and negatively affect material properties. Do not expose to UV light for extended periods of time.



### WARNING

Pump not designed, tested or certified to be powered by compressed natural gas. Powering the pump with natural gas will void the warranty.



### WARNING

The use of non-OEM replacement parts will void (or negate) agency certifications, including CE, ATEX, CSA, 3A and EC1935 compliance (Food Contact Materials). Warren Rupp, Inc. cannot ensure nor warrant non-OEM parts to meet the stringent requirements of the certifying agencies.

# 



When used for toxic or aggressive fluids, the pump should always be flushed clean prior to disassembly.



Before maintenance or repair, shut off the compressed air line, bleed the pressure, and disconnect the air line from the pump. Be certain that approved eye protection and protective clothing are worn at all times. Failure to follow these recommendations may result in serious injury or death.



Airborne particles and loud noise hazards. Wear eye and ear protection.



In the event of diaphragm rupture, pumped material may enter the air end of the pump, and be discharged into the atmosphere. If pumping a product that is hazardous or toxic, the air exhaust must be piped to an appropriate area for safe containment.



Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers and other miscellaneous equipment must be properly grounded.



This pump is pressurized internally with air pressure during operation. Make certain that all fasteners and piping connections are in good condition and are reinstalled properly during reassembly.



Use safe practices when lifting

# **ATEX Pumps - Conditions For Safe Use**

- 1. Ambient temperature range is as specified in tables 1 & 2 on the next page
- 2. ATEX compliant pumps are suitable for use in explosive atmospheres when the equipment is properly grounded in accordance with local electrical codes
- 3. Conductive Polypropylene, conductive Acetal or conductive PVDF pumps are not to be installed in applications where the pumps may be subjected to oil, greases and hydraulic liquids.
- 4. When operating pumps equipped with non-conductive diaphragms that exceed the maximum permissible projected area, as defined in EN ISO 80079-36 : 2016 section 6.7.5 table 8, the following protection methods must be applied
  - Equipment is always used to transfer electrically conductive fluids or
  - Explosive environment is prevented from entering the internal portions of the pump, i.e. dry running.

SANDPIPERPUMP.COM SAN



# **Temperature Tables**

r			
Ambient Temperature	Process Temperature	Temperature	Maximum Surface
Range [°C]	Range [°C]	Class	Temperature [°C]
-20°C to +60°C	-20°C to +80°C	T5	T100°C
	-20°C to +108°C	T4	T135°C
	-20°C to + 160°C	Т3	
	-20°C to +177°C	(225°C) T2	T200°C

### Table 1. Category 2 ATEX Rated Pumps

## Table 2. Category M2 ATEX Rated Pumps for Mining

Ambient Temperature	Process Temperature
Range [°C]	Range [°C]
-20°C to +60°C	-20°C to +150°C

<u>Note:</u> The ambient temperature range and the process temperature range should not exceed the operating temperature range of the applied plastic parts as listed in the manuals of the pumps.



Model F15 Metallic • 3

# **Table of Contents**

# SECTION 1: PUMP SPECIFICATIONS......5

- Explanation of Nomenclature
- Performance
- Materials
- Dimensional Drawings

# **SECTION 2: INSTALLATION & OPERATION ...9**

- Principle of Pump Operation
- Recommended Installation Guide
- Troubleshooting Guide

# SECTION 3: EXPLODED VIEW......12

- · Composite Repair Parts Drawing
- Service & Repair Kits
- Composite Repair Parts List
- Material Codes

# **SECTION 7: WARRANTY & CERTIFICATES .. 14**


- Warranty
- CE Declaration of Conformity Machinery
- ♀ CE Declaration of Conformity EC Regulation 1935/2004/EC

4 • Model F15 Metallic

SANDPIPERPUMP.COM\_ SAND



# **Explanation of Pump Nomenclature**

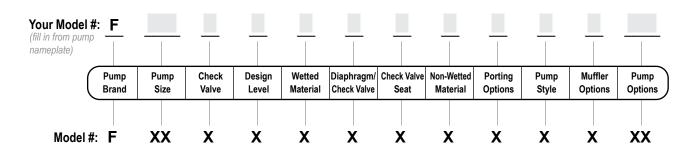

#### Pump Brand

F Food Processing

#### Pump Size 15 1-1/2"

#### Check Valve Type B Ball

D Dui

### Design Level

1 Design Level

### Wetted Material

S Stainless Steel

### **Diaphragm/Check Valve Materials**

- D FDA Santoprene / FDA Santoprene
- H FDA Hytrel / FDA Hytrel
- K PTFE with FDA Hytrel Backer / PTFE
- Z PTFE One-Piece Bonded Fusion Diaphragm / PTFE

### **Check Valve Seat**

- D FDA Santoprene
- H FDA Hytrel
- S Stainless Steel

### **Non-Wetted Material Options**

- N Nickel Plated Aluminum
- **Porting Options**
- T 2" Sanitary Clamp

### **Pump Style**

F Food

### **Muffler Options**

6 Metal Muffler

#### **Pump Options**

0 None

Your Serial #: (fill in from pump nameplate) \_

\*Complies with Code of Federal Regulations (CFR) Title 21 Part 177



f15mdl1sm-rev0219


# Performance

### **ELASTOMERIC AND TPE FITTED**

# Flow Rate

Adjustable to	. 0-71 gpm (268 lpm)
Port Size	
Suction	2" Sanitary Clamp
Discharge	2" Sanitary Clamp
Air Inlet	

Discharge	80 - 8-
Air Inlet 1/2" NPT	240
Air Exhaust	70 7-
Suction Lift	60 - 200 - 6-
Dry	50 - 160 - 5-
Wet	50 - 160 - 5-
Max Solid Size (Diameter)	40 - 4-
	30 - 3-
Max Noise Level 101 dB(A)	80-
Shipping Weights	20 - 2 -

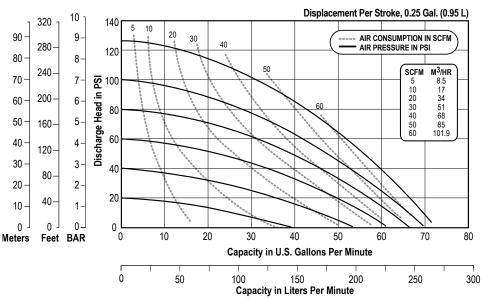

NOTE: Performance based on the following: elastomeric fitted pump, flooded suction, water at ambient conditions. The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.


### PTFE FITTED

### Flow Rate

Adjustable to 0-65 gpm (246 lpm)
Port Size
Suction
Discharge
Air Inlet
Air Exhaust
Suction Lift
Dry
Wet
Max Solid Size (Diameter)
Max Noise Level 101 dB(A)
Shipping Weights
Stainless Steel

~ ~-

(0.40.1

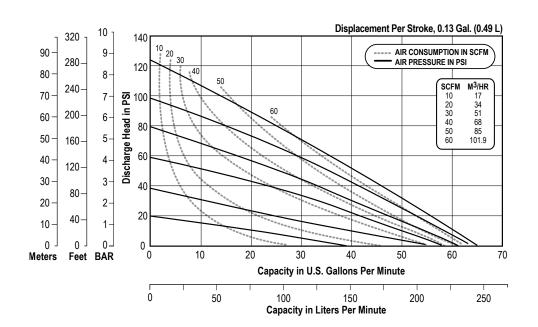

NOTE: Performance based on the following: elastomeric fitted pump, flooded suction, water at ambient conditions. The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.



# **Materials**

Material Profile:		Operating Temperatures:	
	Max.	Min.	
<b>EPDM:</b> Shows very good water and chemical resistance. Has poor resistance to oils and solvents, but is fair in ketones and alcohols.	280°F 138°C	-40°F -40°C	
Hytrel®: Good on acids, bases, amines and glycols at room temperatures only.	220°F 104°C	-20°F -29°C	
Santoprene®: Injection molded thermoplastic elastomer with no fabric layer. Long mechanical flex life. Excellent abrasion resistance.	275°F 135°C	-40°F -40°C	
Virgin PTFE: (PFA/TFE) Chemically inert, virtually impervious. Very few chemicals are known to chemically react with PTFE; molten alkali metals, turbulent liquid or gaseous fluorine and a few fluoro-chemicals such as chlorine trifluoride or oxygen difluoride which readily liberate free fluorine at elevated temperatures.		-35°F -37°C	
Maximum and Minimum Temperatures are the limits for which these materials can be operated. Temperatures coupled with pressure affect the longevity of diaphragm pump components.			

Temperatures coupled with pressure affect the longevity of diaphragm pump components. Maximum life should not be expected at the extreme limits of the temperature ranges.

Ambient temperature range Process temperature range

-20 C to +40 C -20 C to +80 C for models rated as category 1 equipment

-20 c to +100 C for model rated as category 2 equipment In addition, the ambient temperature range and the process temperature range do not exceed the operating temperature range of the applied non-metallic parts as listed in the

manuals of the pumps.

For specific applications, always consult the Chemical Resistance Chart.

Note: This document is a high level guide. Please be aware that not all model and or material combinations are possible for all sizes. Please consult factory or your distributor for specific details.





# **Dimensional Drawings**


# Food Processing Metallic Dimensions in inches (mm dimensions in brackets).

The dimensions on this drawing are for reference only. A certified drawing can be requested if physical dimensions are needed.



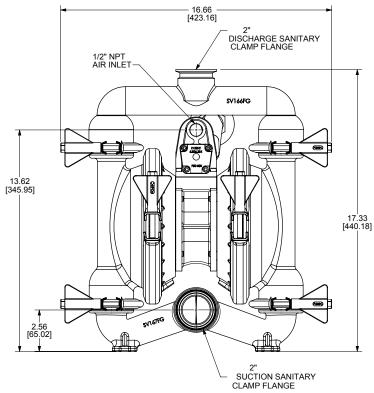

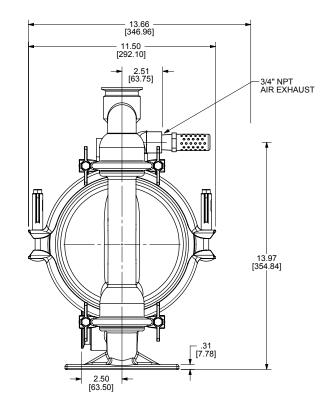


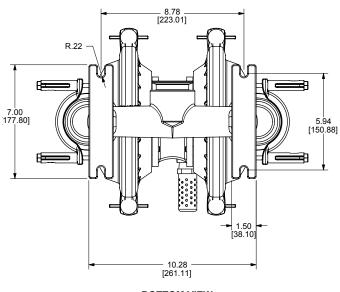

BOTTOM VIEW



# **Principle of Pump Operation**

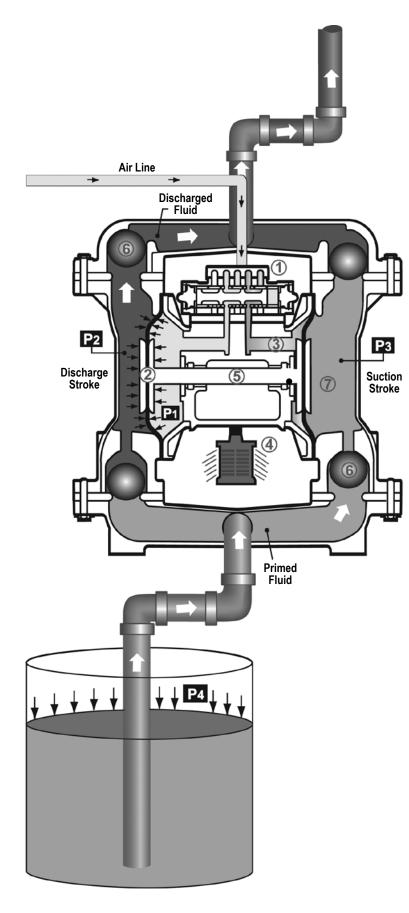

SANDPIPER SANDPIPERPUMP.COM

Air-Operated Double Diaphragm (AODD) pumps are powered by compressed air or nitrogen.


The main directional (air) control valve ① distributes compressed air to an air chamber, exerting uniform pressure over the inner surface of the diaphragm ②. At the same time, the exhausting air ③ from behind the opposite diaphragm is directed through the air valve assembly(s) to an exhaust port ④.

As inner chamber pressure (P1) exceeds liquid chamber pressure (P2), the rod ⑤ connected diaphragms shift together creating discharge on one side and suction on the opposite side. The discharged and primed liquid's directions are controlled by the check valves (ball or flap)⑥ orientation.

The pump primes as a result of the suction stroke. The suction stroke lowers the chamber pressure (P3) increasing the chamber volume. This results in a pressure differential necessary for atmospheric pressure (P4) to push the fluid through the suction piping and across the suction side check valve and into the outer fluid chamber  $\mathcal{T}$ .


Suction (side) stroking also initiates the reciprocating (shifting, stroking or cycling) action of the pump. The suction diaphragm's movement is mechanically pulled through its stroke. The diaphragm's inner plate makes contact with an actuator plunger aligned to shift the pilot signaling valve. Once actuated, the pilot valve sends a pressure signal to the opposite end of the main directional air valve, redirecting the compressed air to the opposite inner chamber.

# SUBMERGED ILLUSTRATION

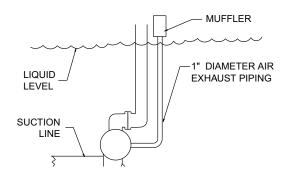

Pump can be submerged if the pump materials of construction are compatible with the liquid being pumped. The air exhaust must be piped above the liquid level. When the pumped product source is at a higher level than the pump (flooded suction condition), pipe the exhaust higher than the product source to prevent siphoning spills.

# **Recommended Installation Guide**

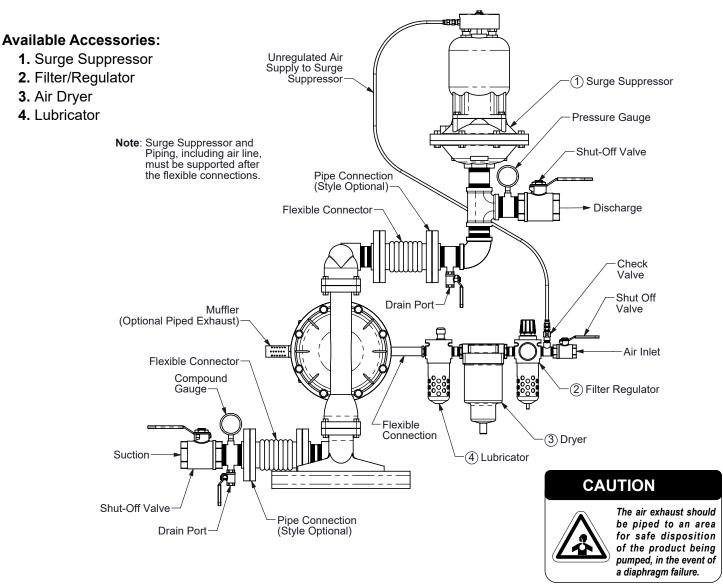

### Installation And Start-Up

Locate the pump as close to the product being pumped as possible. Keep the suction line length and number of fittings to a minimum. Do not reduce the suction line diameter.

### Air Supply

Connect the pump air inlet to an air supply with sufficient capacity and pressure to achieve desired performance. A pressure regulating valve should be installed to insure air supply pressure does not exceed recommended limits.

### **Air Valve Lubrication**

The air distribution system is designed to operate WITHOUT lubrication. This is the standard mode of operation. If lubrication is desired, install an air line lubricator set to deliver one drop of SAE 10 non-detergent oil for every 20 SCFM (9.4 liters/sec.) of air the pump consumes. Consult the Performance Curve to determine air consumption.

### Air Line Moisture

Water in the compressed air supply may cause icing or freezing of the exhaust air, causing the pump to cycle erratically or stop operating. Water in the air supply can be reduced by using a point-of-use air dryer.

### **Air Inlet And Priming**

To start the pump, slightly open the air shut-off valve. After the pump primes, the air valve can be opened to increase air flow as desired. If opening the valve increases cycling rate, but does not increase the rate of flow, cavitation has occurred. The valve should be closed slightly to obtain the most efficient air flow to pump flow ratio.





SANDPIPERPUMP.COM

# **Troubleshooting Guide**

Symptom:	Potential Cause(s):	Recommendation(s):
Pump Cycles Once	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Air valve or intermediate gaskets installed incorrectly.	Install gaskets with holes properly aligned.
	Bent or missing actuator plunger.	Remove pilot valve and inspect actuator plungers.
Pump Will Not Operate	Pump is over lubricated.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
/ Cycle	Lack of air (line size, PSI, CFM).	Check the air line size and length, compressor capacity (HP vs. CFM required).
•	Check air distribution system.	Disassemble and inspect main air distribution valve, pilot valve and pilot valve actuators.
	Discharge line is blocked or clogged manifolds.	Check for inadvertently closed discharge line valves. Clean discharge manifolds/piping.
	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Blocked air exhaust muffler.	Remove muffler screen, clean or de-ice, and re-install.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Pump chamber is blocked.	Disassemble and inspect wetted chambers. Remove or flush any obstructions.
Pump Cycles and Will	Cavitation on suction side.	Check suction condition (move pump closer to product).
Not Prime or No Flow	Check valve obstructed. Valve ball(s) not seating properly or sticking.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket. Clean out around valve ball cage and valve seat area. Replace valve ball or valve seat if damaged. Use heavier valve ball material.
	Valve ball(s) missing (pushed into chamber or manifold).	Worn valve ball or valve seat. Worn fingers in valve ball cage (replace part). Check Chemical Resistance Guide for compatibility.
	Valve ball(s) / seat(s) damaged or attacked by product.	Check Chemical Resistance Guide for compatibility.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
Pump Cycles Running	Over lubrication.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
Sluggish / Stalling,	Icing.	Remove muffler screen, de-ice, and re-install. Install a point of use air drier.
Flow Unsatisfactory	Clogged manifolds.	Clean manifolds to allow proper air flow.
	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Cavitation on suction side.	Check suction (move pump closer to product).
	Lack of air (line size, PSI, CFM).	Check the air line size, length, compressor capacity.
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Air supply pressure or volume exceeds system hd.	Decrease inlet air (press. and vol.) to the pump. Pump is cavitating the fluid by fast cycling.
	Undersized suction line.	Meet or exceed pump connections.
	Restrictive or undersized air line.	Install a larger air line and connection.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Entrained air or vapor lock in chamber(s).	Purge chambers through tapped chamber vent plugs. Purging the chambers of air can be dangerous.
Product Leaking	Diaphragm failure, or diaphragm plates loose.	Replace diaphragms, check for damage and ensure diaphragm plates are tight.
Through Exhaust	Diaphragm stretched around center hole or bolt holes.	Check for excessive inlet pressure or air pressure. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.
Premature Diaphragm	Cavitation.	Enlarge pipe diameter on suction side of pump.
Failure	Excessive flooded suction pressure.	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener.
	Misapplication (chemical/physical incompatibility).	Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.
	Incorrect diaphragm plates or plates on backwards, installed incorrectly or worn.	Check Operating Manual to check for correct part and installation. Ensure outer plates have not been worn to a sharp edge.
Unbalanced Cycling	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Undersized suction line.	Meet or exceed pump connections.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Entrained air or vapor lock in chamber(s).	Purge chambers through tapped chamber vent plugs.


For additional troubleshooting tips contact After Sales Support at service.warrenrupp@idexcorp.com or 419-524-8388



SANDPIPERPUMP.COM

f15mdl1sm-rev0219

# **Composite Repair Parts Drawing**

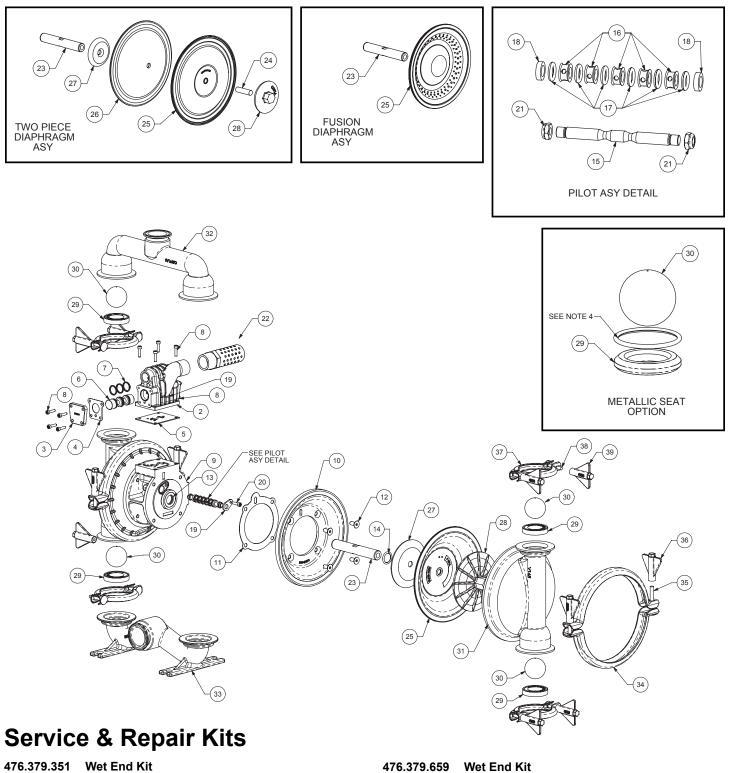

### FDA Santoprene Diaphragms, FDA Santoprene Check Balls, FDA Santoprene Seats

#### Wet End Kit 476.379.350

FDA Hytrel Diaphragms, FDA Hytrel Check Balls, FDA Hytrel Seats

### 476.386.663 Wet End Kit

Hytrel Diaphragms, PTFE Diaphragms, PTFE Check Balls, PTFE Seat O-Rings

1-Piece PTFE Diaphragms, PTFE Check Balls, PTFE Seat O-Rings, Stainless Steel Seats, Stainless Steel Shaft, PTFE Tape

### 476.374.000 Air End Kit

Pilot Spacer, Buna O-Rings, Nylon Lock Nut, Gaskets, Glyd-Ring Set

3: EXP VIEW

12 • Model F15 Metallic

SANDPIPERPUMP.COM



# **Composite Repair Parts List**

		Air Valve	Assembly		
Item #	Qty.	Description	Assembly	Part Number	
1		Valve Body Assembly (includes items 2-8)		P31-200-NP	
2	1	Valve Body		P31-201NP	
3	2	End Cap		P50-300NP	
4	2	End Cap Gasket		P50-110	
5	1	Valve Body Gasket		P31-202	
6	1	Valve Spool		P50-104	
7	3	Glyde Ring Assembly	P50-104C		
8	12	Mounting Screws (8 included on item 1)	S1001		
			ion Assembly		
Item #	Qty.	Description		Part Number	
9	1	Center Block Assembly (Includes item 13 & 14)	P31-400NP ASY		
10	2	Air Chamber	P31-101NP		
11	2	Air Chamber Gasket	P31-109		
12	8	Bolt	SP31-404		
13	2	Bearing Sleeve	P31-403		
14	2	Main Shaft O-Ring		P24-403	
15	1	Pilot Shaft		P50-112	
16	5	Pilot Spacer		P24-106P	
17	6	Pilot O-Ring		P24-107	
18	2	Pilot Ring		P50-119	
19	2	Pilot Retainer	P50-109		
20	2	Screw		S1001	
21	2	Stop Nut		P24-108	
22	1	Muffler	530.036.000		
		Diaphragm Asse	mbly / Elastomers		
				Part Number	
14 14	04.	Description			<b>F</b>
Item #	Qty.	Description	Versa-Rugged	PTF	
	Qty.			PTF Two Piece	Fusion
23	1	Main Shaft	P31-103	PTF Two Piece P31-102	Fusion P31-103
23 24	1 2	Main Shaft Main Shaft Stud	P31-103 N/A	PTF Two Piece P31-102 V221F	Fusion P31-103 N/A
23 24 25	1 2 2	Main Shaft Main Shaft Stud Diaphragm (See Below Material Chart)	P31-103 N/A V163xx	PTF Two Piece P31-102 V221F V163TF	Fusion P31-103 N/A V163F
23 24 25 26	1 2 2 2	Main Shaft Main Shaft Stud Diaphragm (See Below Material Chart) Back-Up Diaphragm	P31-103 N/A V163xx N/A	PTF           Two Piece           P31-102           V221F           V163TF           V163TFB	Fusion P31-103 N/A V163F N/A
23 24 25 26 27	1 2 2 2 2	Main Shaft Main Shaft Stud Diaphragm (See Below Material Chart) Back-Up Diaphragm Inner Diaphragm Plate	P31-103 N/A V163xx N/A V161CNP	PTF           Two Piece           P31-102           V221F           V163TF           V163TFB           V161TINP	Fusion           P31-103           N/A           V163F           N/A           N/A
23 24 25 26 27 28	1 2 2 2 2 2 2 2	Main Shaft Main Shaft Stud Diaphragm (See Below Material Chart) Back-Up Diaphragm Inner Diaphragm Plate Outer Diaphragm Plate	P31-103 N/A V163xx N/A	PTF           Two Piece           P31-102           V221F           V163TF           V163TFB           V161TINP           SV161TO	Fusion P31-103 N/A V163F N/A
23 24 25 26 27 28 29	1 2 2 2 2	Main Shaft Main Shaft Stud Diaphragm (See Below Material Chart) Back-Up Diaphragm Inner Diaphragm Plate Outer Diaphragm Plate Valve Seat (See Below Material Chart)	P31-103 N/A V163xx N/A V161CNP	PTF           Two Piece           P31-102           V221F           V163TF           V163TFB           V161TINP           SV161TO           V170xx	Fusion           P31-103           N/A           V163F           N/A           N/A
23 24 25 26 27 28	1 2 2 2 2 2 2 4	Main Shaft Main Shaft Stud Diaphragm (See Below Material Chart) Back-Up Diaphragm Inner Diaphragm Plate Outer Diaphragm Plate Valve Seat (See Below Material Chart) Valve Ball (See Below Material Chart)	P31-103 N/A V163xx N/A V161CNP	PTF           Two Piece           P31-102           V221F           V163TF           V163TFB           V161TINP           SV161TO	Fusion           P31-103           N/A           V163F           N/A           N/A
23 24 25 26 27 28 29	1 2 2 2 2 2 2 4 4 4	Main Shaft Main Shaft Stud Diaphragm (See Below Material Chart) Back-Up Diaphragm Inner Diaphragm Plate Outer Diaphragm Plate Valve Seat (See Below Material Chart) Valve Ball (See Below Material Chart)	P31-103 N/A V163xx N/A V161CNP SVB161	PTF           Two Piece           P31-102           V221F           V163TF           V163TFB           V161TINP           SV161TO           V170xx	Fusion           P31-103           N/A           V163F           N/A           N/A
23 24 25 26 27 28 29 30 <b>Item #</b>	1 2 2 2 2 2 4 4 4 2 <b>Qty.</b> 2	Main Shaft         Main Shaft Stud         Diaphragm (See Below Material Chart)         Back-Up Diaphragm         Inner Diaphragm Plate         Outer Diaphragm Plate         Valve Seat (See Below Material Chart)         Valve Ball (See Below Material Chart)         Valve Ball (See Below Material Chart)         Wet End         Description         Water Chamber	P31-103 N/A V163xx N/A V161CNP SVB161	PTF           Two Piece           P31-102           V221F           V163TF           V163TFB           V161TINP           SV161TO           V170xx           V171xx           Part Number           SV165FG	Fusion           P31-103           N/A           V163F           N/A           N/A
23 24 25 26 27 28 29 30 <b>Item #</b> 31 32	1 2 2 2 2 2 4 4 4 Qty.	Main Shaft         Main Shaft Stud         Diaphragm (See Below Material Chart)         Back-Up Diaphragm         Inner Diaphragm Plate         Outer Diaphragm Plate         Valve Seat (See Below Material Chart)         Valve Ball (See Below Material Chart)         Wet End         Description	P31-103 N/A V163xx N/A V161CNP SVB161	PTF           Two Piece           P31-102           V221F           V163TF           V163TFB           V161TINP           SV161TO           V170xx           V171xx           Part Number           SV165FG           SV166FG	Fusion           P31-103           N/A           V163F           N/A           N/A
23 24 25 26 27 28 29 30 <b>Item #</b> 31 32 33	1 2 2 2 2 2 4 4 4 4 <b>Qty.</b> 2 2 1	Main Shaft         Main Shaft Stud         Diaphragm (See Below Material Chart)         Back-Up Diaphragm         Inner Diaphragm Plate         Outer Diaphragm Plate         Valve Seat (See Below Material Chart)         Valve Ball (See Below Material Chart)         Valve Ball (See Below Material Chart)         Wet End         Description         Water Chamber         Discharge Manifold         Suction Manifold	P31-103 N/A V163xx N/A V161CNP SVB161	PTF           Two Piece           P31-102           V221F           V163TF           V163TFB           V161TINP           SV161TO           V170xx           V171xx           Part Number           SV165FG           SV166FG           SV167FG	Fusion           P31-103           N/A           V163F           N/A           N/A
23 24 25 26 27 28 29 30 <b>Item #</b> 31 32 33 34	1 2 2 2 2 2 4 4 4 4 <b>Qty.</b> 2 2 1 4	Main Shaft         Main Shaft Stud         Diaphragm (See Below Material Chart)         Back-Up Diaphragm         Inner Diaphragm Plate         Outer Diaphragm Plate         Valve Seat (See Below Material Chart)         Valve Ball (See Below Material Chart)         Valve Ball (See Below Material Chart)         Wet End         Description         Water Chamber         Discharge Manifold         Suction Manifold         Large Clamp Half	P31-103 N/A V163xx N/A V161CNP SVB161	PTF           Two Piece           P31-102           V221F           V163TF           V163TFB           V161TINP           SV161TO           V170xx           V171xx           Part Number           SV165FG           SV166FG           SV167FG           SP31-110A	Fusion           P31-103           N/A           V163F           N/A           N/A
23 24 25 26 27 28 29 30 <b>Item #</b> 31 32 33 34 35	1 2 2 2 2 2 4 4 4 2 2 2 2 1 2 1 4 4	Main Shaft         Main Shaft Stud         Diaphragm (See Below Material Chart)         Back-Up Diaphragm         Inner Diaphragm Plate         Outer Diaphragm Plate         Valve Seat (See Below Material Chart)         Valve Ball (See Below Material Chart)         Valve Ball (See Below Material Chart)         Wet End         Description         Water Chamber         Discharge Manifold         Suction Manifold         Large Clamp Half         Large Clamp Bolt	P31-103 N/A V163xx N/A V161CNP SVB161	PTF           Two Piece           P31-102           V221F           V163TF           V163TFB           V161TINP           SV161TO           V170xx           V171xx           Part Number           SV165FG           SV166FG           SV167FG           SP31-110A           SV164C	Fusion           P31-103           N/A           V163F           N/A           N/A
23 24 25 26 27 28 29 30 <b>Item #</b> 31 32 33 34 35 36	1 2 2 2 2 2 4 4 4 2 2 2 2 1 2 1 4 4 4	Main Shaft         Main Shaft Stud         Diaphragm (See Below Material Chart)         Back-Up Diaphragm         Inner Diaphragm Plate         Outer Diaphragm Plate         Valve Seat (See Below Material Chart)         Valve Ball (See Below Material Chart)         Wet End         Discharge Manifold         Suction Manifold         Large Clamp Bolt         Large Clamp Wing Nut	P31-103 N/A V163xx N/A V161CNP SVB161	PTF           Two Piece           P31-102           V221F           V163TF           V163TFB           V161TINP           SV161TO           V170xx           V171xx           Part Number           SV165FG           SV166FG           SV166FG           SV167FG           SP31-110A           SV164C           FG39C	Fusion           P31-103           N/A           V163F           N/A           N/A
23 24 25 26 27 28 29 30 <b>Item #</b> 31 32 33 34 35 36 37	1 2 2 2 2 2 4 4 4 2 2 2 1 2 1 4 4 4 4 8	Main Shaft         Main Shaft Stud         Diaphragm (See Below Material Chart)         Back-Up Diaphragm         Inner Diaphragm Plate         Outer Diaphragm Plate         Valve Seat (See Below Material Chart)         Valve Ball (See Below Material Chart)         Wet End         Discharge Manifold         Suction Manifold         Large Clamp Half         Large Clamp Wing Nut         Small Clamp Half	P31-103 N/A V163xx N/A V161CNP SVB161	PTF           Two Piece           P31-102           V221F           V163TFB           V163TFB           V161TINP           SV161TO           V170xx           V171xx           Part Number           SV165FG           SV166FG           SV167FG           SP31-110A           SV164C           FG39C           SV169A	Fusion           P31-103           N/A           V163F           N/A           N/A
23 24 25 26 27 28 29 30 <b>Item #</b> 31 32 33 34 35 36 37 38	1 2 2 2 2 2 4 4 4 2 2 2 1 4 4 4 4 8 8 8	Main Shaft         Main Shaft Stud         Diaphragm (See Below Material Chart)         Back-Up Diaphragm         Inner Diaphragm Plate         Outer Diaphragm Plate         Valve Seat (See Below Material Chart)         Valve Ball (See Below Material Chart)         Wet End         Description         Water Chamber         Discharge Manifold         Suction Manifold         Large Clamp Half         Large Clamp Bolt         Large Clamp Wing Nut         Small Clamp Bolt	P31-103 N/A V163xx N/A V161CNP SVB161	PTF           Two Piece           P31-102           V221F           V163TFB           V163TFB           V161TINP           SV161TO           V170xx           V171xx           Part Number           SV165FG           SV166FG           SV167FG           SP31-110A           SV164C           FG39C           SV169A           SV169B	Fusion           P31-103           N/A           V163F           N/A           N/A
23 24 25 26 27 28 29 30 <b>Item #</b> 31 32 33 34 35 36 37	1 2 2 2 2 2 4 4 4 2 2 2 1 2 1 4 4 4 4 8	Main Shaft         Main Shaft Stud         Diaphragm (See Below Material Chart)         Back-Up Diaphragm         Inner Diaphragm Plate         Outer Diaphragm Plate         Valve Seat (See Below Material Chart)         Valve Ball (See Below Material Chart)         Wet End         Description         Water Chamber         Discharge Manifold         Suction Manifold         Large Clamp Half         Large Clamp Wing Nut         Small Clamp Bolt         Small Clamp Bolt         Small Clamp Wing Nut	P31-103 N/A V163xx N/A V161CNP SVB161 Assembly	PTF           Two Piece           P31-102           V221F           V163TFB           V163TFB           V161TINP           SV161TO           V170xx           V171xx           Part Number           SV165FG           SV166FG           SV167FG           SP31-110A           SV164C           FG39C           SV169A	Fusion           P31-103           N/A           V163F           N/A           N/A
23 24 25 26 27 28 29 30 <b>Item #</b> 31 32 33 34 35 36 37 38 39	1 2 2 2 2 2 4 4 4 2 2 2 1 4 4 4 4 8 8 8 8	Main Shaft         Main Shaft Stud         Diaphragm (See Below Material Chart)         Back-Up Diaphragm         Inner Diaphragm Plate         Outer Diaphragm Plate         Valve Seat (See Below Material Chart)         Valve Ball (See Below Material Chart)         Wet End         Description         Water Chamber         Discharge Manifold         Suction Manifold         Large Clamp Half         Large Clamp Wing Nut         Small Clamp Bolt         Small Clamp Bolt         Small Clamp Wing Nut	P31-103 N/A V163xx N/A V161CNP SVB161 Assembly	PTF           Two Piece           P31-102           V221F           V163TFB           V161TINP           SV161TO           V170xx           V171xx           Part Number           SV165FG           SV166FG           SV166FG           SV167FG           SP31-110A           SV169A           SV169B           FG69C	Fusion           P31-103           N/A           V163F           N/A           N/A           N/A
23 24 25 26 27 28 29 30 <b>Item #</b> 31 32 33 34 35 36 37 38 39 <b>Mate</b>	1 2 2 2 2 4 4 4 2 2 2 1 4 4 4 4 4 4 8 8 8 8 8 8	Main Shaft         Main Shaft Stud         Diaphragm (See Below Material Chart)         Back-Up Diaphragm         Inner Diaphragm Plate         Outer Diaphragm Plate         Valve Seat (See Below Material Chart)         Valve Ball (See Below Material Chart)         Wet End         Description         Water Chamber         Discharge Manifold         Suction Manifold         Large Clamp Half         Large Clamp Wing Nut         Small Clamp Bolt         Small Clamp Bolt         Small Clamp Wing Nut         Elastomer Mater         Versa-Rugged Diaphragm P/N	P31-103 N/A V163xx N/A V161CNP SVB161 Assembly	PTF           Two Piece           P31-102           V221F           V163TFB           V163TFB           V161TINP           SV161TO           V170xx           V171xx           Part Number           SV165FG           SV166FG           SV169A           SV169B           FG69C	Fusion           P31-103           N/A           V163F           N/A           N/A           N/A           P/N
23 24 25 26 27 28 29 30 <b>Item #</b> 31 32 33 34 35 36 37 38 39 <b>Mate</b> PTf	1 2 2 2 2 4 4 4 4 2 2 1 4 4 4 4 4 8 8 8 8 8 8 8 8 8	Main Shaft         Main Shaft Stud         Diaphragm (See Below Material Chart)         Back-Up Diaphragm         Inner Diaphragm Plate         Outer Diaphragm Plate         Valve Seat (See Below Material Chart)         Valve Ball (See Below Material Chart)         Wet End         Discharge Manifold         Large Clamp Half         Large Clamp Wing Nut         Small Clamp Bolt         Small Clamp Wing Nut         Elastomer Materi         Versa-Rugged Diaphragm P/N         See item # 25	P31-103 N/A V163xx N/A V161CNP SVB161 Assembly IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	PTF           Two Piece           P31-102           V221F           V163TFB           V163TFB           V161TINP           SV161TO           V170xx           V171xx           Part Number           SV165FG           SV166FG           SV166FG           SV166FG           SV166FG           SV166FG           SV166FG           SV166FG           SV164C           FG39C           SV169A           SV169B           FG69C	Fusion           P31-103           N/A           V163F           N/A           N/A           N/A           P/N           tallic seat)
23 24 25 26 27 28 29 30 <b>Item #</b> 31 32 33 34 35 36 37 38 39 <b>Mate</b> PTF FDA H	1 2 2 2 2 4 4 4 4 2 2 1 4 4 4 4 4 4 8 8 8 8 8 8 8 8 8 8 8 8 8	Main Shaft         Main Shaft Stud         Diaphragm (See Below Material Chart)         Back-Up Diaphragm         Inner Diaphragm Plate         Outer Diaphragm Plate         Outer Diaphragm Plate         Valve Seat (See Below Material Chart)         Valve Ball (See Below Material Chart)         Wet End         Description         Water Chamber         Discharge Manifold         Large Clamp Half         Large Clamp Wing Nut         Small Clamp Bolt         Small Clamp Wing Nut         Elastomer Materi         Versa-Rugged Diaphragm P/N         See item # 25         V163TPEFG	P31-103 N/A V163xx N/A V161CNP SVB161 Assembly IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	PTF           Two Piece           P31-102           V221F           V163TFB           V163TFB           V161TINP           SV161TO           V170xx           V171xx           Part Number           SV165FG           SV166FG           SV166FG           SV166FG           SV166FG           SV166FG           SV166FG           SV166FG           SV164C           FG39C           SV169A           SV169B           FG69C           Seat I           N/A (use me           V170TF	Fusion         P31-103         N/A         V163F         N/A         N/A         N/A         P/N         tallic seat)         PEFG
23 24 25 26 27 28 29 30 <b>Item #</b> 31 32 33 34 35 36 37 38 39 <b>Mate</b> PTf	1           2           2           2           2           4           4           4           4           4           8           9           9           9           9           9           9           9	Main Shaft         Main Shaft Stud         Diaphragm (See Below Material Chart)         Back-Up Diaphragm         Inner Diaphragm Plate         Outer Diaphragm Plate         Valve Seat (See Below Material Chart)         Valve Ball (See Below Material Chart)         Wet End         Discharge Manifold         Large Clamp Half         Large Clamp Wing Nut         Small Clamp Bolt         Small Clamp Wing Nut         Elastomer Materi         Versa-Rugged Diaphragm P/N         See item # 25	P31-103 N/A V163xx N/A V161CNP SVB161 Assembly IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	PTF           Two Piece           P31-102           V221F           V163TFB           V163TFB           V161TINP           SV161TO           V170xx           V171xx           Part Number           SV165FG           SV166FG           SV166FG           SV166FG           SV166FG           SV166FG           SV166FG           SV166FG           SV164C           FG39C           SV169A           SV169B           FG69C	Fusion           P31-103           N/A           V163F           N/A           N/A           N/A           N/A           N/A           N/A           P/N           2EFG           > Note 1)

### Notes:

1.) (4) V170T o-rings are to be used with metallic fitted seats.



3: EXP VIEW

# **5 - YEAR Limited Product Warranty**

Warren Rupp, Inc. ("Warren Rupp") warrants to the original end-use purchaser that no product sold by Warren Rupp that bears a Warren Rupp brand shall fail under normal use and service due to a defect in material or workmanship within five years from the date of shipment from Warren Rupp's factory. Warren Rupp brands include Warren Rupp<sup>®</sup>,SANDPIPER<sup>®</sup>, SANDPIPER Signature Series<sup>™</sup>, MARATHON<sup>®</sup>, Porta-Pump<sup>®</sup>, SludgeMaster<sup>™</sup> and Tranguilizer<sup>®</sup>.

The use of non-OEM replacement parts will void (or negate) agency certifications, including CE, ATEX, CSA, 3A and EC1935 compliance (Food Contact Materials). Warren Rupp, Inc. cannot ensure nor warrant non-OEM parts to meet the stringent requirements of the certifying agencies.

 See sandpiperpump.com/content/warranty-certifications for complete warranty, including terms and conditions, limitations and exclusions.



# WARREN RUPP, INC. **Declaration of Conformity**

Manufacturer: Warren Rupp, Inc., 800 N. Main Street, Mansfield, Ohio, 44902 USA

certifies that SANDPIPER® Air-Operated Double Diaphragm Food Processing Pump Models and Tranguilizer<sup>®</sup> Surge Suppressor Models comply with the European Community Regulations:

(EC) No 1935/2004 for Food Contact Materials

(EC) No 2023/2006 Good Manufacturing Practice

(EU) No 10/2011 on plastic materials and articles intended to come in contact with food

### Food Processing Pump Models:

SSB2, TD3SS.

T1FB1SASWTS600. T1FB1S9SWTS600. T1FB1SDSWTS600. T1FB1SLSWTS600. T1FB1S9TWTS600. T15B1SDSWTS600. T15B1SSSWTS600. T15B1SDSSTS600. T15B1SSSSTS600. T15B1SSTWTS600.

T15B1SSTSTS600. T20B1SASWTS600. T20B1SDSWTS600. T20B1SASSTS600. T20B1SDSSTS600. T20B1SASWTS600. T20B1SDSWTS600. T20B1SASSTS600. T20B1SDSSTS600. T30B1SASWTS600.

T30B1SDSWTS600. F10B1SZSNTF600. T30B1SASSTS600. F10B1SDSNTF600. T30B1SDSSTS600. F15B1SKSNTF600. F15B1SKTNTF600. F05B1SGSPTF000. F15B1SZSNTF600. F05B1SZSPTF000. F15B1SHHNTF600. F05B1SHSPTF000. F15B1SDDNTF600. F05B1SDSPTF000. F15B1SKSNTC600. F10B1SHSNTF600. F15B1SZSNTC600. F10B1SKSNTF600. F15B1SHSNTC600.

F20B1SHHNTF600. F20B1SKSNTF600. F20B1SZSNTF600. F20B1SDDNTF600. F20B1SHSNTC600. F20B1SKSNTC600. F20B1SZSNTC600. F30B1SHHNTF600. F30B1SDDNTF600. F30B1SKSNTF600. F30B1SZSNTF600.

### Tranquilizer<sup>®</sup> Surge Suppressors:

TA1.NG1SS TA2.NG2SS TA25,NG1SS TA50,NG2SS TA1-1/2,NG1SS TA3,NG2SS TA40.NG1SS TA80.NG2SS

• Materials used in equipment intended for food contact (Annex I (EC) No 1935/2004) :

 Rubber Metals & Alloys
 Plastics

Plastic Materials: PTFE and FKM/ PTFE coated

The plastic components are suitable to come in contact with multiple food types, provided that storage contact time does not exceed 1/2 hour, contact temperature does not exceed 40°C and maximum operating temperatures within the instructions manual are not exceeded. Diaphragm failure may allow process fluids to come in contact with nonconforming materials. Regular inspections are recommended.

This Declaration is based on :

- · Declaration of Conformities from raw material suppliers
- Total Migration Analysis per (EU) No 10/2011

Supporting document will be made available to competent authorities to demonstrate compliance

oseber

Signature of authorized person

David Roseberry Printed name of authorized person February 8, 2013

Date of issue

Director of Engineering Title

February 25, 2019 Date of revision

